



Acoustic Panels

# Maintenance Guide



[www.modernlawn.co.uk](http://www.modernlawn.co.uk)  
[info@modernlawn.co.uk](mailto:info@modernlawn.co.uk)



— The Modern —  
**Lawn Company**





# Introduction

— The Modern —  
**Lawn Company**

**Wooden acoustic panels are designed to offer excellent sound control and add a touch of elegance to your space.**

**To ensure they continue to perform well and look their best, follow this maintenance guide.**



[www.modernlawn.co.uk](http://www.modernlawn.co.uk)



[info@modernlawn.co.uk](mailto:info@modernlawn.co.uk)







## →← Step 1

# Regular Dusting

### **Dust Frequently:**

Use a soft, dry cloth or a microfiber duster to gently wipe down your acoustic wood panels.

This will help remove dust and prevent buildup, keeping the panels clean and preserving their appearance.



## →← Step 2

# Vacuum to Remove Dirt

### **Vacuum Gaps:**

Use a vacuum with a soft brush attachment to clean between the wooden slats and the surface. Move the vacuum slowly over the panels to remove dirt that may accumulate in the grooves.



## →← Step 3

# Spot Cleaning for Stains

### Wipe with a Damp Cloth:

For small stains or marks on the wooden surface, use a slightly damp, clean cloth to wipe them off. Make sure to dry the surface afterward with a dry cloth to avoid moisture damage.

### Use Mild Cleaners:

If needed, apply a wood-safe cleaner for more stubborn stains. Avoid using harsh chemicals or abrasive cleaners, as they may damage the wood's finish.



## →← Step 4

# Prevent Moisture Damage



### Avoid Excessive Moisture:

Wood can be sensitive to water and humidity, which may lead to warping or cracking. Keep your panels away from areas prone to moisture, such as bathrooms or kitchens.

### Maintain Stable Humidity:

Ensure that your room's humidity levels stay within a range suitable for wood to prevent expansion or contraction.





## →← Step 5

# Protect Against Scratches and Dents

### **Be Cautious with Furniture:**

If your acoustic panels are near furniture, take precautions to avoid contact that could cause scratches or dents in the wood.

### **Use Furniture Pads:**

Consider placing pads under chairs or tables near the panels to minimise accidental damage



## →← Step 6

# Protecting Your Lawn from Heavy Objects

It's safe to place heavy garden furniture, trampolines, and other items on artificial grass, but be mindful of compaction.

### **Move Regularly:**

Shift heavy items slightly every few months to allow the grass underneath to recover.

### **After Moving:**

Brush the grass to help it spring back into its original form.





## →← Step 7

# Refinishing the Wood

### Reapply Finish:

Over time, the finish on your acoustic wood panels may wear down. If needed, apply a fresh coat of wood finish or sealant to restore the panels' protective layer and enhance their appearance. Ensure to follow the product instructions carefully.



### Final Tips:

#### Avoid Direct Sunlight:

Prolonged exposure to direct sunlight can cause wood to fade or warp. If your panels are near windows, consider using blinds or curtains to protect them.

#### Clean Gently:

Always use soft materials and avoid abrasive tools that could scratch or damage the wood surface.

By following these maintenance tips, your acoustic wood panels will remain in top condition, providing excellent sound control and enhancing the beauty of your space for years to come.

